

MODEL BE HONDA SERIES 75-90 HP 2007
ASSEMBLY INSTRUCTIONS
4 STROKE 91.5 CU. IN.

1. Place the engine on the transom of your boat so that it is mounted vertically, in the normal fashion. Remove the five bolts holding the gearbox to the exhaust housing and remove the gearbox assembly.
2. Remove the water pump assembly from the propeller drive, including the lower stainless steel plate, dowel pins, and impeller drive key.
3. Install the jet driveshaft assembly into the main housing, locking it in place with the four 5/16-18 x 1 bolts with lock washers. Use grease on the threads. Tighten to 15 Ft-Lbs.
4. Install the water pump assembly on top of the 5/8" thick aluminum adapter and stainless steel plate. Be sure also, to install the water pump impeller drive key removed from the propeller drive. No gasket is needed beneath the lower stainless steel plate. Use the four metric bolts and centering washers from the propeller gear box. Grease the threads.
5. Install the M10 taper lock stud at the rear of the motor mid-section. Grease the threads and after tightening, grease the tapered section.
6. Next, attach the Jet Drive to the motor. Install the plastic shift rod guide #1661, in the 5/16 hole, the front dowel #1985, in the 3/8 hole, and the dowel pin #616 in the rear hole, to align the Jet Drive to the motor. Four M10 bolts and lock washers from below are used. Select the lower bolt lengths to suit the different counter bore depths so that all bolts enter the exhaust housing the same depth. Grease the bolt threads, driveshaft spline generously, and rubber water tube socket, and guide the Jet into place. Tighten the four bolts to 22 Ft-Lbs.
7. Grease the threads and tapered section of the wedge bolt. Install through the 5/16 cross hole at the rear of the Jet Drive, to capture the taper lock stud. Install the fiber lock nut and tighten to 7 Ft-Lbs.
8. Next, install the impeller. Grease the shaft threads, key and impeller bore. Place the plastic sleeve inside the impeller, hold the key in the nose of the impeller with your forefinger and slide onto the driveshaft. Install the seven shim washers, rubber washer and cup, and nut retainer on the shaft, up against the impeller, and bring the nut up snug by hand.

Then bump the nut up snug with a wrench. If the ears of the retainer do not line up with the flats on the nut, spin the nut off, turn the retainer over and tighten the nut again. In one of these two positions you will have alignment and can fold the ears up against the nut to retain it. The flat in the retainer is angled to the ears to allow this.

When, after use in sand and gravel, the blade clearance becomes more than about 1/32" between the impeller edge and the water intake liner, one or more of the shim washers can be transferred from the bottom stack to the top of the impeller, which moves the impeller down into the tapered casing to reduce the clearance.

Shims should not be used above the impeller on new installations where no wear has occurred unless the blade clearance exceeds 1/32 inch. Insufficient blade clearance will do more harm than good from any performance gains it might provide.

8. Place the intake casing in position with the lower end at the rear and tighten the six nuts. No lock washers are used. Grease the threads.

MODEL BE HONDA SERIES 75-90 HP 2007
ASSEMBLY INSTRUCTIONS
4 STROKE 91.5 CU. IN.

9. If a tiller steering handle is used, a 4 1/2 foot cable from the tiller shift handle is attached to the reverse gate cam. If remote controls are used, two cables are attached to the cable anchor bracket and reverse gate cam, to operate the neutral switch inside the cowling. The inside linkage at the reverse gate cam carries a 5 foot cable from the cam, into the motor cowling to operate the neutral switch and is driven by the movement of the reverse gate. The outside linkage carries the cable from the remote control box to operate the reverse gate.
10. With the shift handle in forward and the reverse gate in forward, **with the cam roller at the end of the slot**, adjust the cable and/or cable anchor position to this condition. **Shift to reverse and back to forward. The roller should be at the end of the cam slot such that the gate cannot be forcibly rotated toward reverse. Pull on the gate by hand to verify this.**
Shift to neutral and adjust the cable end in the motor housing so that the neutral switch is activated.


If this forward lock condition is not met, readjust the cable positions.

11. **When converting to jet drive, your motor will have to be raised to height shown in diagram below, using a straight edge under the boat.** Test run the boat and then raise or lower the motor 3/8 inch at a time to obtain the best results.

The motor has four sets of upper mounting holes. You will use one set to begin with. Mark pencil lines on the boat transom through the other sets. Then if you wish to go up or down 3/8 inch, you can drill one alternate set of holes 3/8 inch up or down from the pencil marks. By alternating between these two sets of transom holes and the three sets of motor holes, the motor can be moved in 3/8 inch increments over almost one inch. The transom height should be about 26" measured vertically from the boat bottom.

If you raise it too much it will suck air and cavitate, either on start up or when banking on turns. When cavitating, the motor overspeeds in spurts and shakes considerably in the motor mount. **This is not a normal condition and should be avoided by proper adjustment of motor height on each individual boat.** If you lower it too much you will have excessive drag, therefore mount the motor as high as possible without allowing cavitation.

SETTING MOTOR HEIGHT

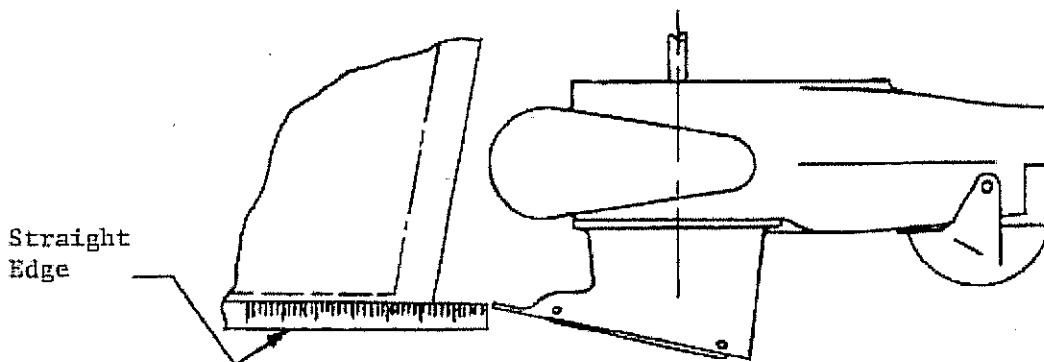

MODEL BE HONDA SERIES 75-90 HP 2007
ASSEMBLY INSTRUCTIONS
4 STROKE 91.5 CU. IN.

CAUTION

When starting the engine for the first time, watch to see that the cooling water comes out of the small hole at the left side of the engine just below the power head. This is to check your assembly of the cooling water pump and its connections.

MAINTENANCE AND LUBRICATION

See last page.

CAUTION

V4 and V6 jet drives

It is important on high HP installations to mount the motor at the correct height and to use the power tilt properly.

Power tilt is convenient for drifting and when operating at low throttle in very shallow areas. When under power however, the engine should not be tilted out in an effort to gain speed as is done with propellers.

The engine driveshaft should be vertical when planing or tilted toward the boat in order to provide a scooping angle on the water intake grill. **Tilting the motor out beyond a vertical position reduces the scoop angle and can cause impeller slippage and cavitation burns on the impeller blades.**

When running in a bay, lake or wide river in windy conditions, particularly when running with the wind, the jet can suck in air when jumping across the wave crests. This will result in overspeeding and causes severe strain on the driveshaft when the engine is suddenly brought back to normal speed as the impeller once again grabs solid water.

If your boat is used frequently under these conditions, the engine height should be set lower than normal to minimize overspeeding. Running at reduced throttle will help when winds are strong. You can also experiment with a plate extending from the hull bottom to the top of the leading edge of the water intake as shown in paragraph 7 of the owner's manual. This tends to reduce air intake as well as to reduce spray.

A water intake fin kit, part #1186 is now available. The purpose of these fins is to ram more water into the intake and to shield the forward sides of the intake from the entrance of air. There is a noticeable reduction of engine overspeeding when running with the wind on a heavy chop. To a lesser degree, the fins provide some rudder effect when operating at a low speeds. This is not a cure all for cavitation and it is still necessary to set the engine height and angle properly and to minimize obstructions or imperfections in the hull ahead of the intake.

GOOD BOATING AND HAVE FUN!

Specialty Manufacturing Company
Outboard Jets
2035 Edison Avenue
San Leandro, CA 94577

MAINTENANCE AND LUBRICATION OUTBOARD JET DRIVE

BEARING LUBRICATION

A grease gun and tube of grease is supplied with your jet drive. We recommend greasing the bearing every 10 hours. Make greasing a part of your cleanup after the days use. Pump in just enough grease to fill the lube hose. Then reconnect the lube hose coupling to the zerk grease fitting.

Every 30-40 hours, pump in extra grease so as to purge any moisture. The texture of the grease coming out gives an indication of conditions inside the bearing housing. A gradual increase in moisture content indicates seal wear. If the grease begins to turn dark, dirty gray, the bearing and seals should be inspected and replaced if necessary. Some discoloration of the grease is normal during the break in period on new sets of seals.

We have selected a water resistant grease of the proper consistency for this application. If you use a substitute grease, be sure it is water resistant and of the same consistency.

IMPELLER

Your jet drive is equipped with a key to protect the unit in the event of a rock jam. This can be reached by removing the water intake, and then the driveshaft nut, similar to a propeller drive. After replacing the key, pull the shaft nut up tight to remove any play between the impeller and shaft. Note the position of the impeller shim washers, and replace them in the same order.

REVERSE GATE MECHANISM

Occasionally check adjustment of the gate shifting linkage. In "forward" the gate should be firmly locked in position. Pull on the gate by hand to verify this. This will prevent wave action from accidentally shifting the gate into reverse as the boat is violently maneuvered

GENERAL

Check all mounting bolts, intake screws, linkage connections, etc., occasionally to be sure they are tight.

SALT WATER USE

Aluminum and stainless steel have been used in the construction of your jet drive. These materials have either been treated or are inherently resistant to corrosion. It is recommended, however, that when not in use the motor be tipped up so that the jet unit is out of the water. When used in salt water more than in fresh water, remove mounting hardware, grease, and reassemble once a year. Failure to do this may result in hardware that is difficult if not impossible to remove at a later date.


GUARANTEE

Due to inflexible government regulation, we do not have a written warranty. We have, however, a good reputation for fairness with our customers which we intend to maintain. If you think you have a warranty situation, regarding material, workmanship, call us before making repairs.

Specialty Manufacturing Company
Outboard Jets
2035 Edison Avenue
San Leandro, CA 94577

LARGE SERIES


NEUTRAL CABLE ASSEMBLY
MODEL AIR, AN, AP, U4-4 SUZUKI
1318

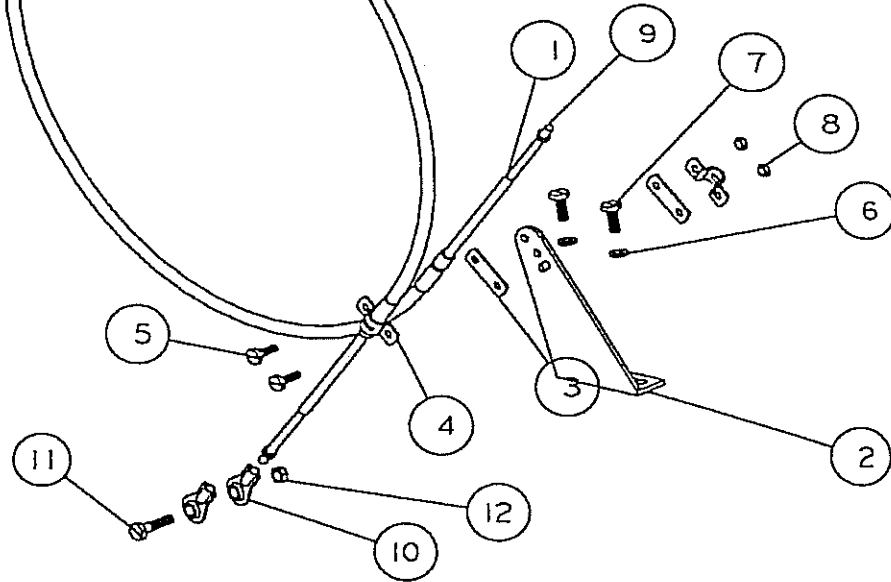

REF	QTY	PART NO.	DESCRIPTION
1	1	547.2	CABLE 5 FT MOR 33C SUPREME
2	1	156	BRACKET CABLE SUPT OMC, MORSE
3	2	542	SHIM MORSE A035777
4	2	543	CLAMP CHRYS 154317
5	2	561.1	FIL HD SLOTTED 10-24 X 3/4
6	2	635	1/4 WASHER AN960C416
7	2	572	BOLT HEX HD 1/4-20 X 5/8
8	2	619	NYLOC 10-24
9	2	621.1	NUT HEX 10-32
10	2	553.2	BALL END 1/4X10-32 CABLE
11	1	585	BOLT HEX HD 1/4-20 X 1 1/4
12	1	623	NYLOC 1/4-20

MEDIUM SERIES

SHIFT CABLE ASSEMBLY HONDA TILLER
 STEERING HANDLE - STARTING 2004
 SHORT 15" MOTOR 1828
 LONG 20" MOTOR 1829


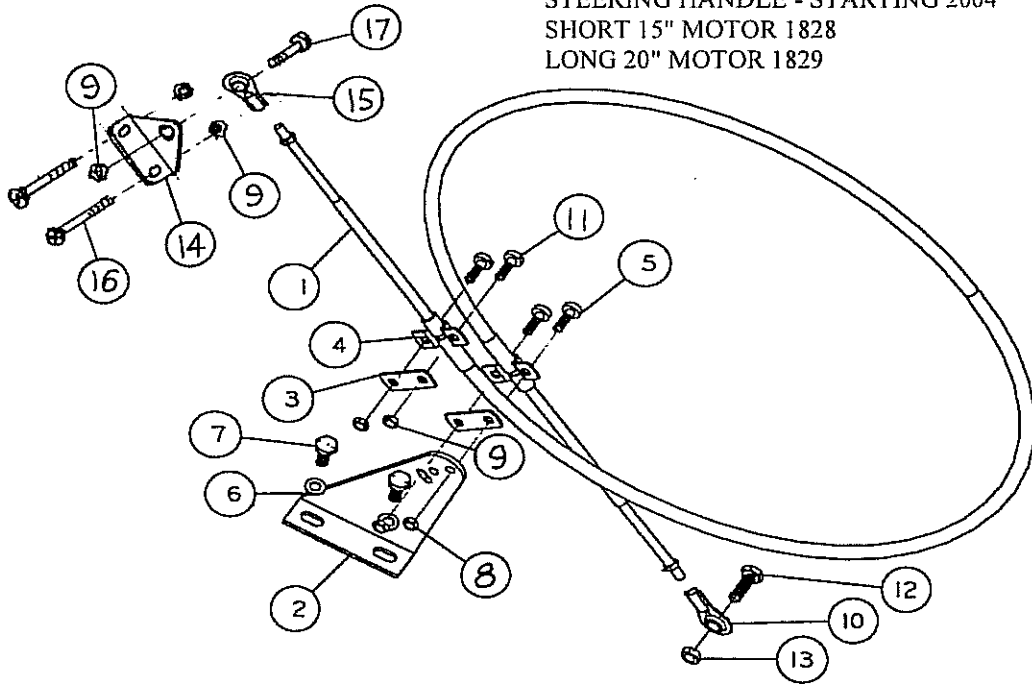



REF	QTY	PART NO.	DESCRIPTION
1	1	547	CABLE 4 FT MOR 33C SUPREME SHORT
1	1	547.1	CABLE 4 1/2 FT MOR 33C SUPREME LONG
2	1	156	BRACKET CABLE SUPPORT
3	2	542	SHIM MORSE AO35777
4	2	543	CLAMP CHRYS 154317
5	2	561	FIL HD SLOTTED 10-24 X 5/8
6	2	635	1/4 WASHER AN960C416
7	2	572	BOLT HEX HD 1/4-20 X 5/8
8	2	619	NYLOC 10-24
9	5	621	NYLOC 10-32
10	1	553.2	BALL END 1/4 X 10-32 CABLE
11	2	562	PAN HD SLOTTED 10-32 X 1/2
12	1	573	BOLT HEX HD 1/4-20 X 3/4
13	1	623	NYLOC 1/4-20
14	1	1824	SHIFT LEVER AI HONDA LONG 04
15	1	553.1	BALL END #10X10-32 CABLE
16	2	558.1	PAN HD PHILLIPS 10-32 X 1 1/2
17	1	558.4	PAN HD PHILLIPS 10-32 X 3/4

REMOTE CONTROL


Typical neutral cable routing between motor mount and mid section

NEUTRAL CABLE ASSY
1318

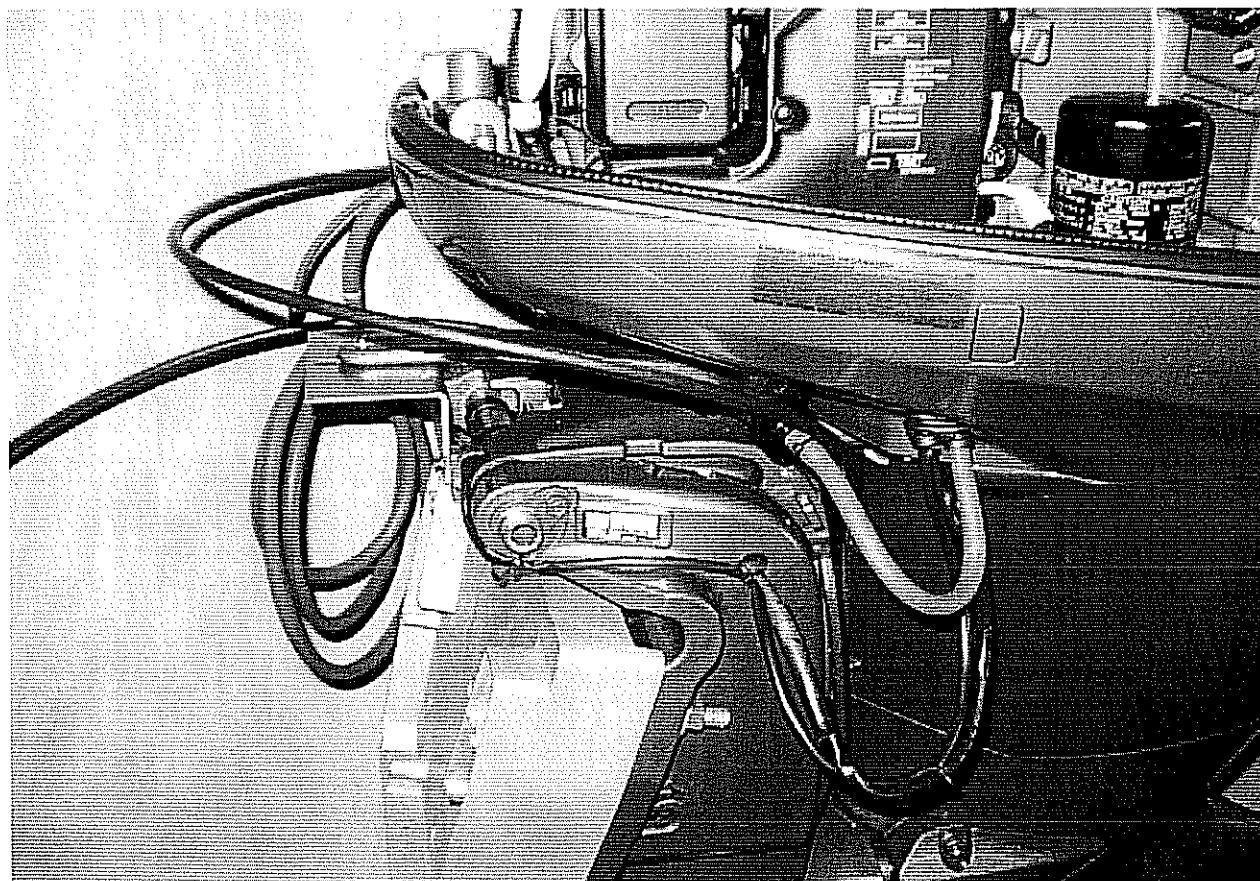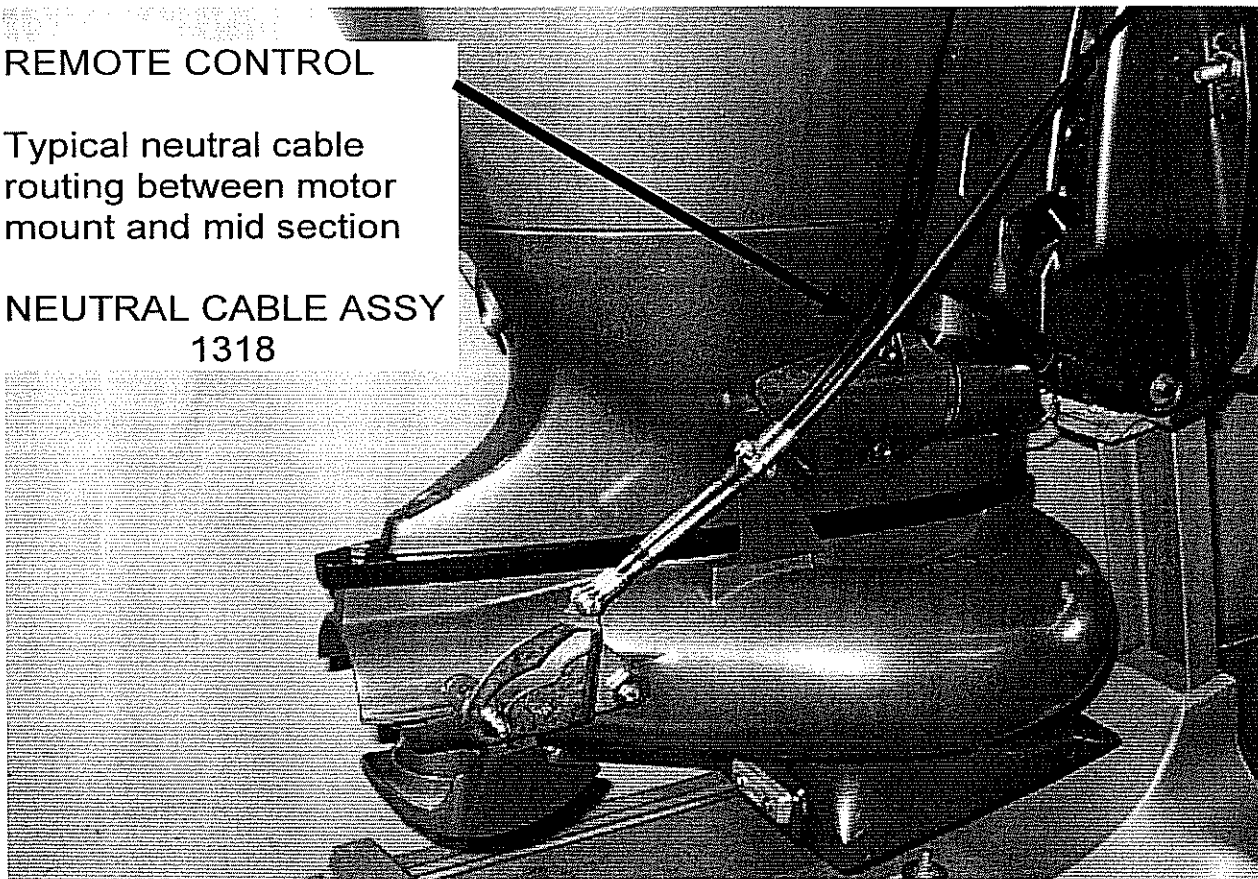

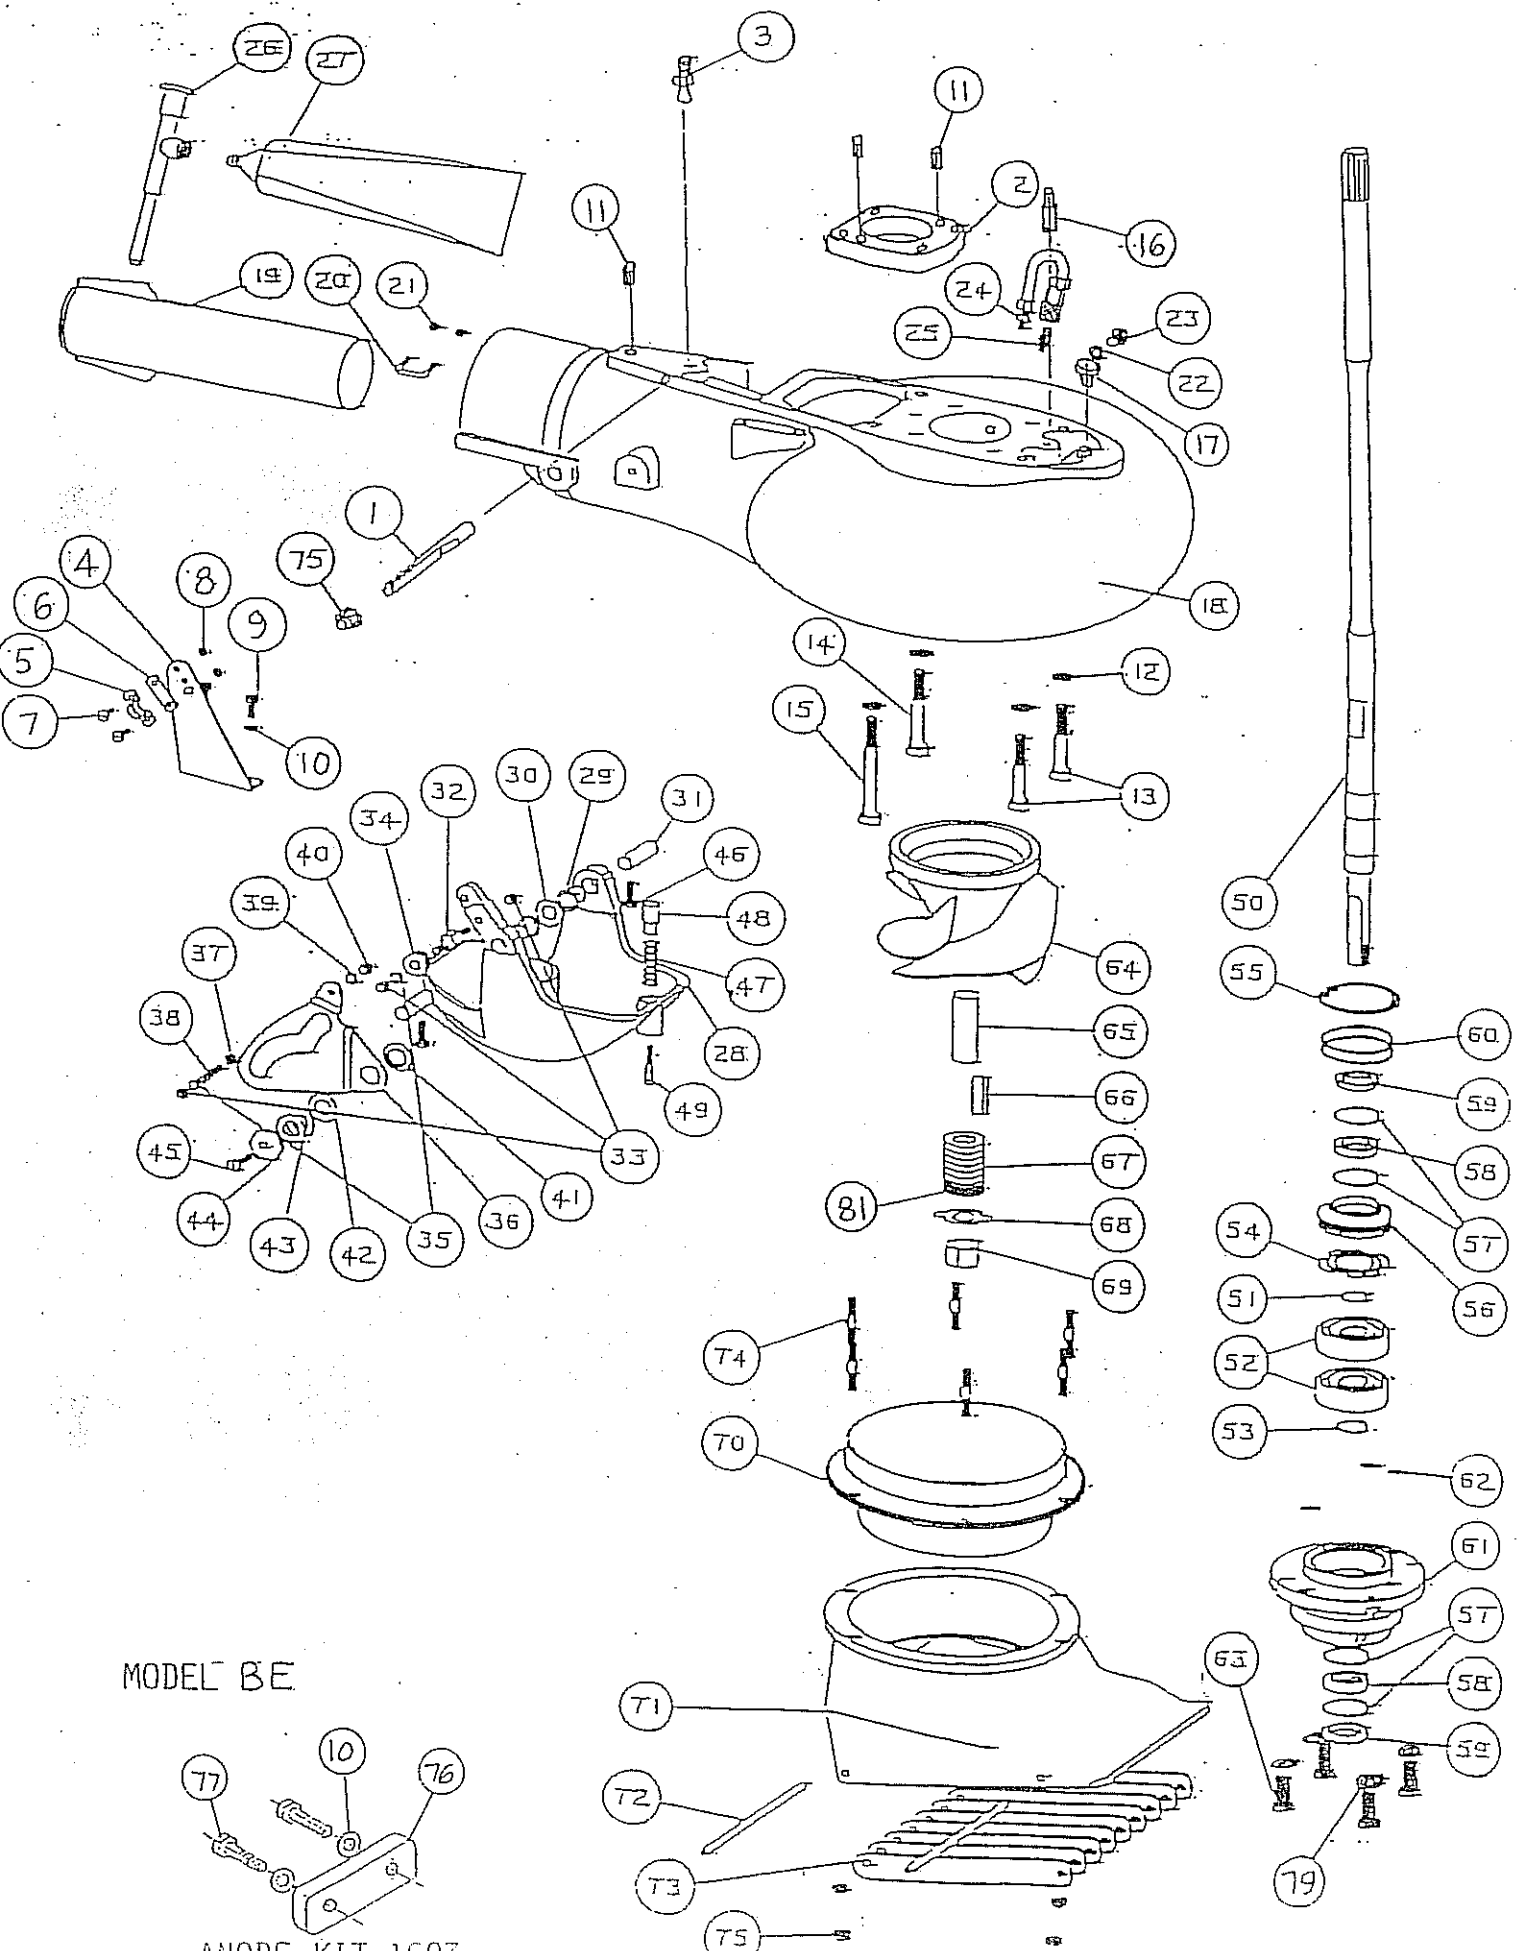

MODEL BE

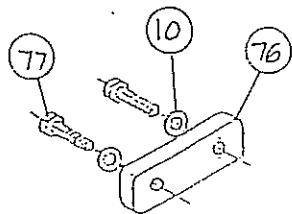

ANODE KIT 1693

MODEL BE90 HONDA 75-90 HP 2007


REF	QTY	PART NO.	DESCRIPTION	REF	QTY	PART	DESCRIPTION
1	1	1486	WEDGE BOLT AN	51	1	41	SHAFT BEARING THRUST RING
2	1	1981	PUMP ADAPTER BE	52	2	502	BEARING 7305B-UA
3	1	1485	WEDGE STUD AN	53	1	511	TRUARC 5100-98
4	1	156	BRACKET CABLE SUPT OMC, MORSE	54	1	404	BACKUP WASHER
5	1	543	CLAMP CHRYS 154317	55	1	513	TRUARC N5002-2502D
6	1	542	SHIM MORSE A035777	56	1	432	UPPER SEAL CARRIER W/SEALS & O RINGS
7	2	561.1	FIL HD SLOTTED 10-24 X 3/4	57	4	517	SPIROLOX RR-150S
8	2	619	NYLOC 10-24	58	2	506	SEAL INNER
9	2	572	BOLT HEX HD 1/4-20 X 5/8	59	2	507	SEAL OUTER 6324-S
10	4	635	1/4 WASHER AN960C416	60	2	527	O RING 568-141 3/32X2 5/16X2 1/2
11	3	616	DOWEL PIN 6 X 16 MM	61	1	393.5	BEARING CARRIER W/SEALS & O RING 5/16
12	4	636	WASHER SPRING LOCK M10	62	3	521	O RING 568-011 1/16X5/16X7/16
13	2	592.2	BOLT HEX HD M10-1.25 X 60MM	63	4	602.1	BOLT HEX HD 5/16-18 X 1 PATCH
14	1	592.3	BOLT HEX HD M10-1.25 X 70MM	64	1	106.25	IMPELLER 7 3/8 75-90 HP
15	1	592.4	BOLT HEX HD M10-1.25 X 90MM	65	1	136	SHAFT SLEEVE PLASTIC LARGE
16	1	1661	SHIFT GUIDE AN, AY-ROD	66	1	1706	IMPELLER TEE KEY - 1/2 ROUND
17	1	1985	FRONT DOWEL	67	8	121	SHIM WASHER LARGE
		1980.05	VOLUTE WITH GATE BE	68	1	781	NUT KEEPER LARGE/PKG 2 PER BAG
18	1	1979.05	VOLUTE WITH EXHAUST TUBE BE	69	1	122.1	SHAFT NUT 3/4-16 BRASS
19	1	128	EXHAUST TUBE ASSY LARGE 2 1/2			1333.05	INTAKE ASSY 7 3/8 FLANGED W/ GRILL & LINER
20	1	847	CLIP EXHAUST TUBE 3/4	70	1	1431	LINER 7 3/8 FLANGED
21	2	621	NYLOC 10-32	71	1	1332.05	INTAKE PAINTED ONLY
22	1	1023	WASHER FIBER 3/8	72	2	14	GRILL ROD
23	1	1022	BOLT HEX HD 3/8-16 X 1/2	73	9	117	GRILL BAR LARGE
24	1	975	LUBE HOSE ASSY	74	6	1319	STUD - INTAKE LARGE
25	1	539	ZIRC FITTING 1/4-28	75	7	625	NYLOC 5/16-18
26	1	550	GREASE GUN	76	1	1635	ANODE PAD - SMALL, MED, LRG
27	1	552	GREASE 10 OZ TUBE NO. 630AA	77	2	587.3	BOLT HEX HD M6-1.0 X 25MM
28	1	1172.05	REVERSE GATE LARGE	79	4	640	WASHER SPRING LOCK 5/16
29	2	536	NYLINER 1/2 ID X 13/16	81	1	1719	TORSIONAL DAMPER 3/4
30	1	1178	SPRING GATE PIVOT 1/2				
31	2	823	PIN GATE PIVOT 1/2 LARGE				
32	1	1043	SHAFT ROLLER				
33	3	624	NYLOC 1/4-28				
34	1	1042	ROLLER ASSY.				
35	2	635	1/4 WASHER AN960C416				
36	1	1034	SHIFT CAM LARGE				
37	1	62	NUT HEX JAM 1/4-28				
38	1	1199	PIVOT - CABLE END				
39	1	638	WASHER SPRING LOCK 1/4				
40	1	622	NUT HEX 1/4-28				
41	1	1037	BUSHING CAM				
42	1	1038	WASHER CAM				
43	2	1039	SHIM - CAM				
44	1	1036	CAM ECCENTRIC DRILLED				
45	1	574.1	BOLT HEX HD 1/4-20 X 1 PATCH				
46	2	574	BOLT HEX HD 1/4-20 X 3/4 PATCH				
47	1	1170	SPRING GATE BUMPER				
48	1	1497	GATE BUMPER				
49	1	559.2	FIL HD SLOTTED 10-32 X 1 1/4 PATCH				
	1	1984	SHAFT ASSY COMPLETE BE 19T				
50	1	1983	SHAFT ONLY, BE 19T 30 5/32 LG				

SIZE	TORQUE
1/4-20 (M6)	8-9 FT-LBS
5/16-18 (M8)	12 FT-LBS
3/8-16 (M10)	22 FT-LBS

NEUTRAL SWITCH CABLE ASSY 1318 SEE PAGE 25
NOT NEEDED WITH TILLER STEERING

TILLER STEERING
SHIFT CABLE ASSY 1829 SEE PAGE 25.2

BEARING, SEAL, SNAP & "O" RING KIT
2 BRG 462.2

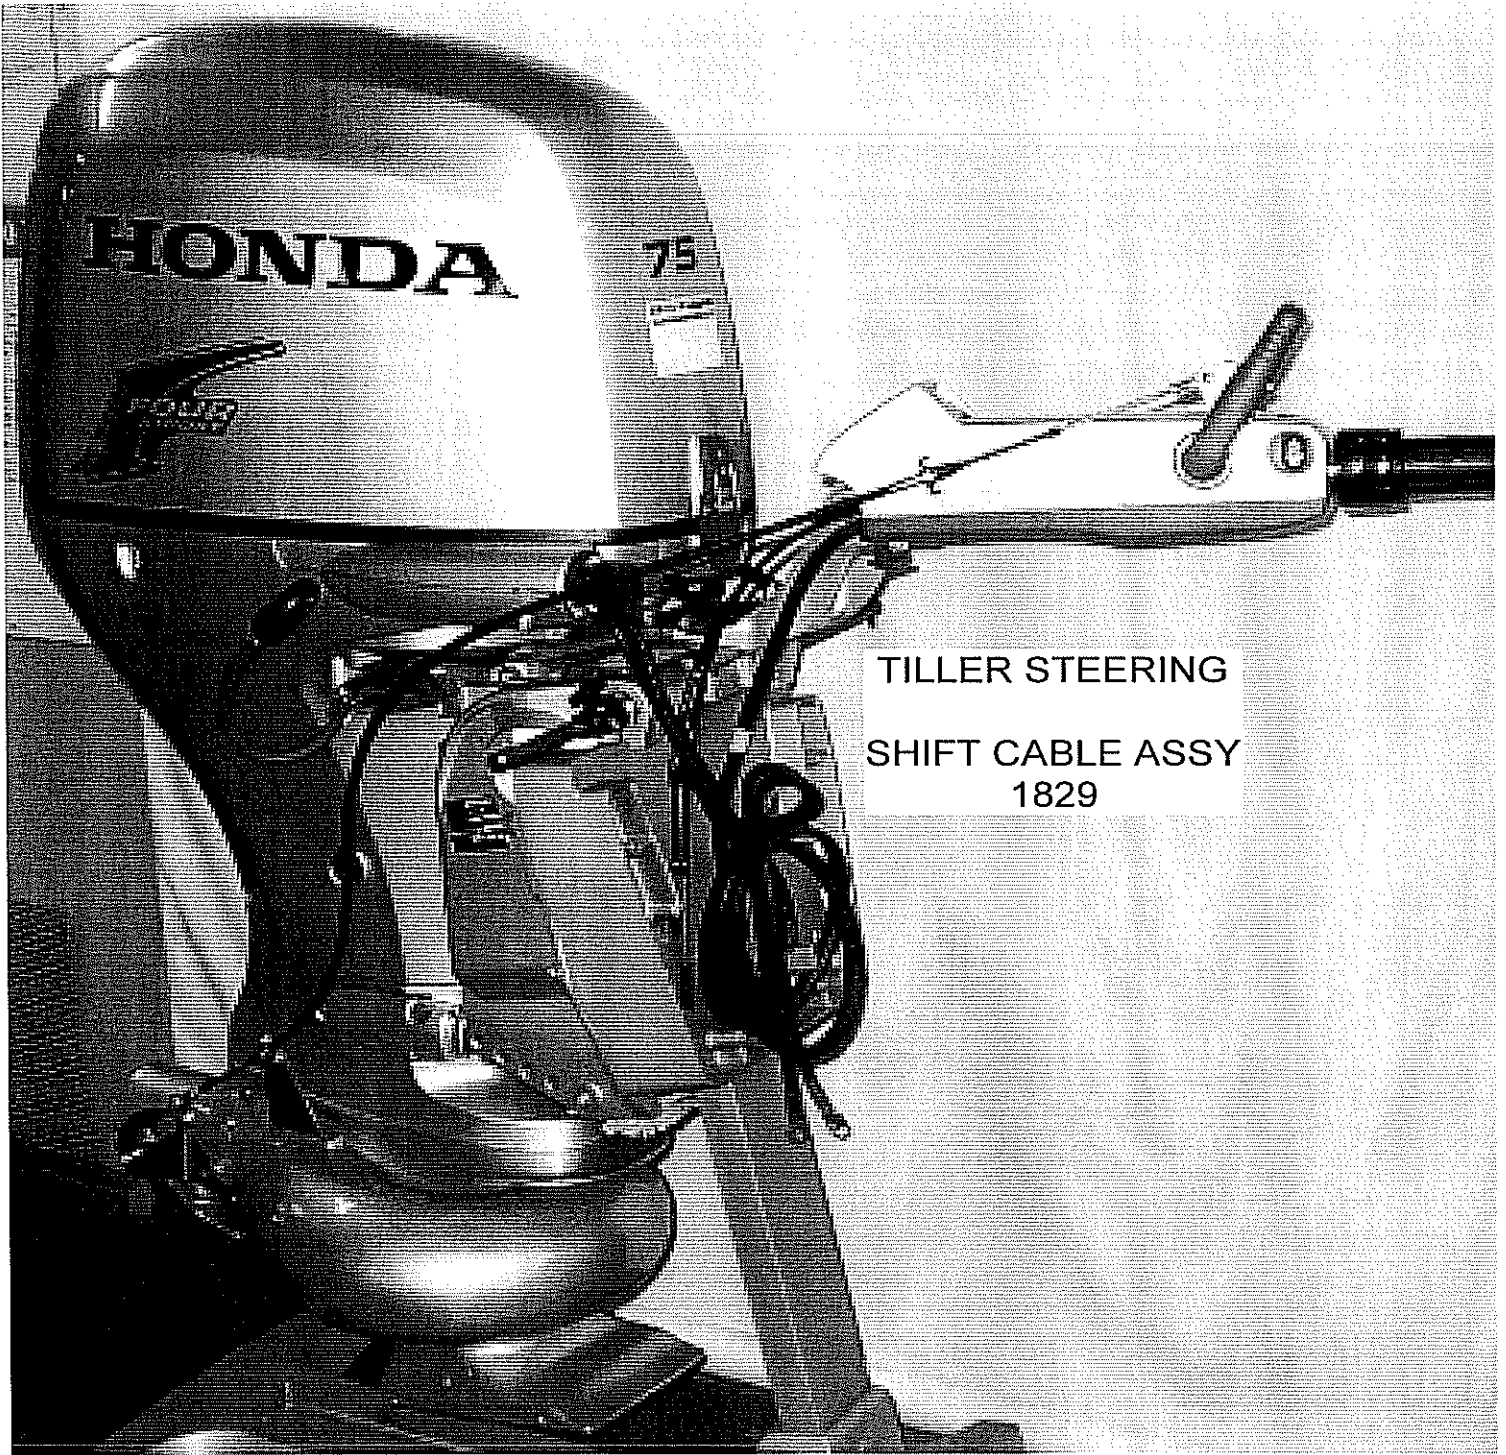

TILLER STEERING
SHIFT CABLE ASSY
1829